

Product Name: **FRD CC 6w**

 
The products listed contains a light source of energy efficiency class:




XCFRA6CT

Disassembly Instructions:

1. Ensure power is off prior to disassembly.
2. Slowly pull down until retention clips are exposed then pinch together to remove with ease.
3. Undo terminations.
4. Loosen the cable retention screw on the downlight.
5. Use a blunt tool to pry the casing and front lens cover open
6. Unscrew all visible screws and nuts including those on the gear tray.
7. Segregate all components and products.



Non-replaceable light source

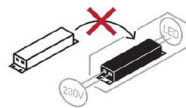

Non-replaceable control gear

Light source non replaceable due to risk of damaging luminaire
