

Product Name: **FRD**

 
The products listed contains a light source of energy efficiency class:




XCFRD76WW / NW

Disassembly Instructions:

1. Ensure power is off prior to disassembly.
2. Slowly pull down until retention clips are exposed then pinch together to remove with ease.
3. Undo terminations.
4. Unscrew screws on back of downlight to reveal control gear.
5. Using a screw driver remove front lens cover.
6. Unscrew all visible screws and nuts including those on the gear tray.
7. Unscrew all visible screws and nuts to segregate all component parts.

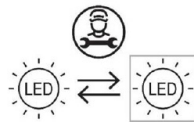

Replaceable light source by professional

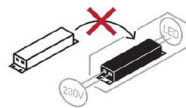

Non-replaceable control gear