

Product Name: **FRD MINI TILT CC**

The products listed contains a light source of energy efficiency class:




XCFRAT5CT

Disassembly Instructions:

1. Ensure power is off prior to disassembly.
2. Slowly pull down until retention clips are exposed then pinch together to remove with ease.
3. Undo terminations.
4. Unscrew screws on back of downlight to reveal control gear.
5. Using a screw driver remove front lens cover.
6. Unscrew all visible screws and nuts including those on the gear tray.
7. Unscrew all visible screws and nuts to segregate all component parts.



Non-replaceable light source

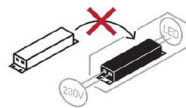

Non-replaceable control gear

Light source non replaceable due to risk of damaging luminaire
