

Product Name: **SCOOP**

The products listed contains a light source of energy efficiency class:




XCSC15WNW



XCSC40WNW

Disassembly Instructions:

1. Ensure power is off prior to disassembly.
2. Dislodge the fitting slowly until the recessed arms are visible.
3. Fold the recessed arms in and remove completely.
4. Disconnect the barrel connector.
5. Undo terminations.
6. Unscrew all visible screws and nuts to segregate all component parts.

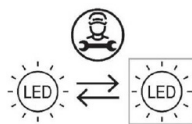

Replaceable light source by professional



Replaceable control gear by professional